

YAMAHA RX-V677 SPEAKER CONFIGURATION



If you're only using two speakers, press the *MUSIC* button until '2ch Stereo' appears.



If you're using the centre speaker as well as the left and right ones, press the *STRAIGHT* button.



If you have any difficulties or issues with the equipment, contact Jay at jay@cinemaforall.org.uk or 0114 221 0314

**CINEMA
FOR ALL**